


ROCK BUCKET, SKID STEER QUICK ATTACH P/N: 1RBKT-SSQA-O (Orange) 1RBKT-SSQA-TB (Black)

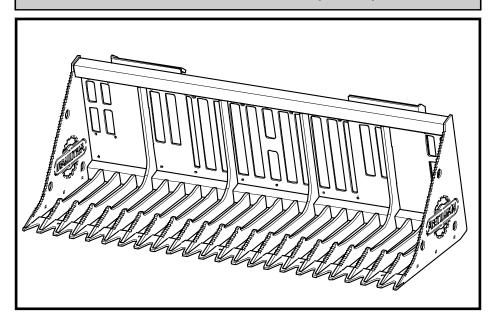

The Artillian Rock Bucket is designed to allow a compact tractor to lift, transport, or remove rocks from 2 inches or larger and sift out sand, dirt or other smaller debris.

This bucket is designed to attach to any loader using the Skid Steer quick attach system.

Approximate Installation Time

Experienced Dealer Technician – 15 Minutes

Average Dealer Technician – 15 Minutes

Do-It-Yourself - 20 Minutes

Approximate Product Specifications

Bucket Width: ~54 inches (inside)

Bucket Height: ~16 inches (inside)

Bucket Depth: ~22 inches (inside)

Weight: 194 lbs. (not including accessories)

Capacity: 2000 lbs. (including accessories)

Register your new product quickly online at Artillian.com/product-registration/



Artillian encourages all customers to register their Artillian products. However, failure to do so will not diminish right to warranty. Curtis Industries does not sell or share your information with anyone else.

Download a digital copy of your installation instructions online at <u>Artillian.com/literature/</u>



Artillian strives to continuously improve our products, technical documentation, etc. Therefore, the installation manual for this product may have been updated after your product was packaged. The latest revision of the installation manual can always be found at the website above.

The contents of this envelope are the property of the owner. Leave with the owner when installation is complete.

SAFETY

Wear gloves whenever handling loader attachments. Watch for sharp edges and possible pinching hazards. Steel toe boots, eye and hearing protection are also recommended anytime working around a tractor.



2. It is the responsibility of the operator to provide adequate rear ballast on the tractor to counter loads lifted with the rock bucket. Please reference the Ballast Calculator produced by John Deere that can be found at the Technical Information page of the Artillian website for more information.

- Tractor loaders are optimized for speed and power, not necessarily for precise 3. control. Heavy loads can drop very quickly. Make control inputs carefully. TAKE YOUR TIME. PLAN AHEAD. WATCH FOR OBJECTS ABOVE, BESIDE, BELOW, IN FRONT OF AND BEHIND YOU.
- Be aware when moving in reverse of objects in your path when turning. If an object is struck, do not use the system until a complete inspection has been performed.
- 5. This system should never be used for lifting or moving people.
- 6. This system should not be used to suspend an object that is to be manipulated by a person. Always use positive support such as a table, chain fall, sawhorses, etc. in the event of a hydraulic failure, load shift, etc.
- Check your tire pressure. You may find that it needs to be increased for use with 7. higher loads.
- Always wear your seat belt and be sure all ROPS provisions on your tractor are in proper working order and configured to perform as intended.
- Inspect the bucket occasionally for possible unseen damage. The areas around the loader attaching points and along the upper rail are where overstress damage would most likely be detected.
- 10. The components of this system are electrically conductive. Be aware of and avoid any sources of electrical power with this system.
- 11. All safety guidelines illustrated in your tractor and loader owner's manuals should be observed whenever using an Artillian loader attachment. In the event of conflicting information found here, defer to the information in your tractor owner's manual.
- 12. This product is designed FOR PERSONAL USE ONLY by the original purchaser. It is not to be used for commercial applications such as for rental equipment or commercial construction, for example. Any such use voids warranty.

ASSEMBLY

Rock Bucket Unpacking and Mounting

Your Artillian Rock Bucket comes attached to a pallet ready to mount to your loader. You do not need to lift it. Simply remove the straps and packing materials then follow the steps below.

Attaching the Rock Bucket to the Skid Steer quick attach loader

- Release the levers and remove any attachments (e.g. factory bucket) from your loader mounts.
- 2. Approach the backside of the Artillian rock bucket with your machine. Tilt the loader mounts forward so that the upper attaching points fit under the mating points on the fork frame.
- 3. Catch and lift the frame off of the ground slightly and curl the loader back fully.
- 4. Shut off the engine and/or set the parking brake.
- 5. Swing the levers to drop the securing pins into the lower holes in the pallet fork frame.
- 6. Your rock bucket is now ready to use. To remove, reverse these instructions.

Use of the Artillian Rock Bucket



When carrying a load in your rock bucket,

- a. ALWAYS KEEP THE LOAD AS LOW AS POSSIBLE for the task at hand.
- b. Keep the load as far back toward the loader as safely possible.
- c. Keep the load curled back as far as practical to prevent the load from falling forward.
- d. Keep in mind that the level of the load may need to be adjusted for changes in grade.
- e. More ballast is necessary while sloping downhill than on flat ground or sloping uphill.



When transporting from one location to another with no load, <u>ALWAYS KEEP THE FRONT OF THE BUCKET CURLED UPWARD</u> so that

- a. You will know where they are for ease of maneuvering, and
- b. They cannot inadvertently strike or gouge any objects in your path or plunge into the ground.



When parked, always rest the bucket flat on the ground to prevent causing a tripping hazard.