




## Keylock - Installation Instructions

For the Artillian Attachments

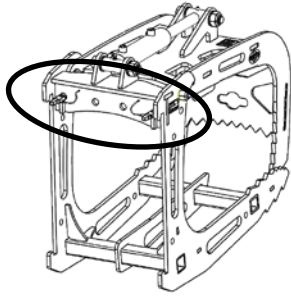

*Shown with GRP-GP20-GR Grapple Module*

### Parts Included

1. (1) Keylock with wire
2. (1) 3/32" ID Set Screw Collar
3. (1) 1/16" Hex Wrench

### Tools Required

1. Wire cutters

## Installation

1. Cut wire from old key to remove and discard, if necessary.
2. Insert bare wire end of new key through hole from the rear of the Artillian attachment, as shown.
3. Pass Set Screw Collar over wire end, as shown. Adjust the position along the wire so the Keylock has just enough slack to function properly.
4. Grip the Collar with pliers to hold in place.
5. Using the Hex Wrench, tighten the Set Screw in the Collar until it binds firmly on the Wire.
6. Remove Hex Wrench from Collar.
7. Trim excess wire to length just beyond the Collar.
8. The Keylock is ready for use.

